

How to implement Hardware Access with CGI Programs

For some applications of your DIL/NetPC DNP/5280 it can be necessary to access hardware addresses directly by CGI programs.

- **1. Step:** For the direct access of hardware addresses by Linux user spaces programs, we offer the SSV Hardware Access Driver (**SSVHWA**). This software consist of a loadable module and two files **ssvhwa.c** and **ssvhwa.h**. The loadable module is already a part of the Linux and is installed at boot time. Link your application with the code of **ssvhwa.c**.
- **2. Step:** There are two different versions of the file **ssvhwa.c** available (version 1.00 and version 1.02). For CGI programs please use version 1.02. With version 1.00 you don't get any hardware access with a CGI program. The first lines of the code within **ssvhwa.c** shows the version information.

```
/*
 * SSV HardWareAccess driver module and userspace functions
 * for DNP/5280-3V
 * Author   : MHA@SSV <info@dilnetpc.com> <m.hasewinkel@web.de>
 * Date    : 26.08.2003
 * Version : 1.00
 * License  : GPL
 */

/*
 * SSV HardWareAccess driver module and userspace functions
 * for DNP/5280-3V
 * Author   : MHA@SSV <info@dilnetpc.com> <m.hasewinkel@web.de>
 * Date    : 28.04.2004
 * Version : 1.02
 * License  : GPL
 */
```

It is also possible to use version 1.02 of **ssvhwa.c** for all other direct hardware access applications with your DIL/NetPC DNP/5280.

That's all.